




1. POSITION GRAPHIC ON VEHICLE & TACK WITH MASKING TAPE. APPLY 2" MASKING TAPE DOWN, CENTER OF GRAPHIC FOR "HINGING".

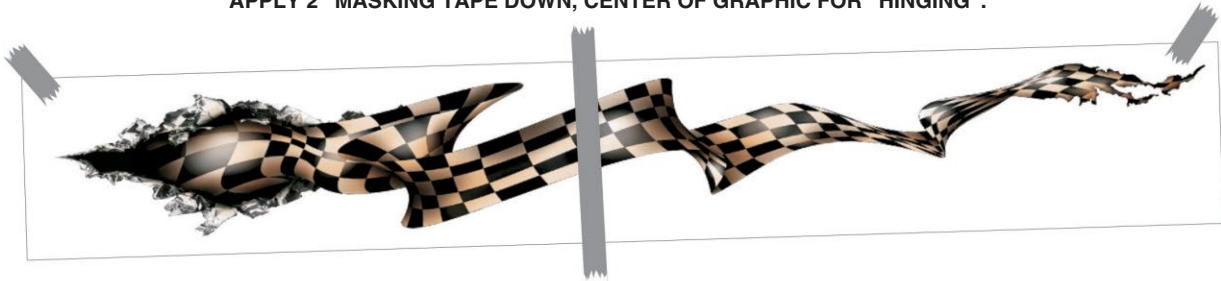

2. LIFT ONE SIDE OF GRAPHIC AWAY FROM VEHICLE. PEEL BOTTOM BACKING PAPER AWAY FROM GRAPHIC. CUT (DO NOT TEAR) BACKING PAPER OFF & REMOVE.

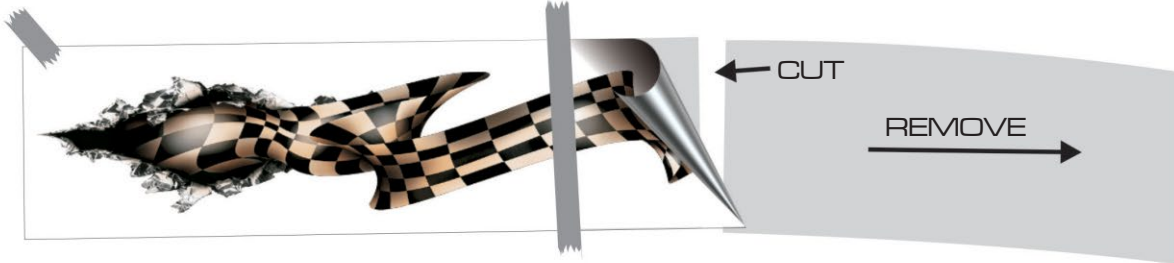

3. SQUEEGEE DOWN EXPOSED PART OF GRAPHIC ON VEHICLE FROM CENTER OUT.

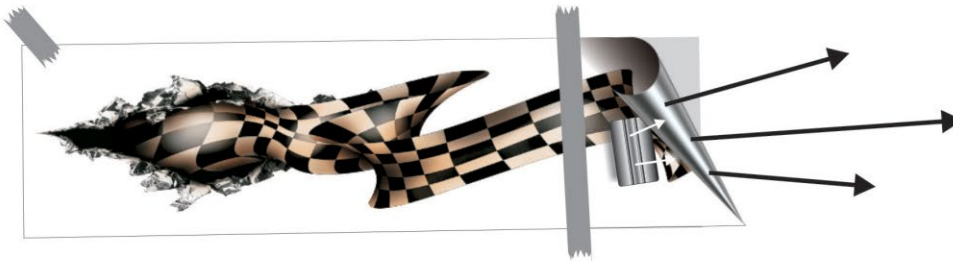

4. REMOVE ANY REMAINING MASKING TAPE. PEEL REMAINING BACKING PAPER FROM GRAPHIC.



5. SQUEEGEE DOWN REMAINING PART OF GRAPHIC ON VEHICLE FROM CENTER OUT. SLOWLY REMOVE TRANSFER PAPER FROM THE ENTIRE GRAPHICS & TRIM DOOR SEAMS, HANDLES, ETC.



* THOUGH READY FOR IMMEDIATE DOOR EXPOSURE, TOTAL TIME FOR ADHESIVE TO BOND FULLY IS APPROX 48 HRS.